




EF01 EDC FLASHLIGHT MANUAL



WARNING:

1. Do not shine directly in the eyes, the powerful LED light will damage the eyes immediately.
2. If the battery is not used for a long time, please charge and discharge it every 3 months to keep the battery in good condition.
3. It is normal to use the lights for a long time to heat up.
4. When the indicator light shows low power, please charge the battery as soon as possible.
5. Please keep the battery away from water, moisture and drop etc.
6. To avoid damage to the surface of the flashlight, please do not expose the flashlight to sunlight, water, chemicals, corrosive gases or any other oxidizing environment frequently.
7. Before use, please tear off the transparent film on the battery surface before use.

INSTRUCTIONS FOR USE

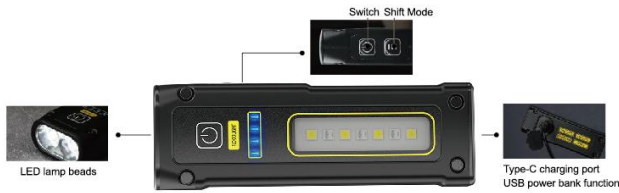

1. Press the central button switch to turn on the side light COB white light, continue to press to shift (white light-red light-red and blue flashing-off); press the side LED main switch to turn on/off the LED light source, turn on the LED light source, press Adjustment mode switch to adjust gear (double strong light-double low light-single strong light-single low light-) cycle.
2. The blue indicator light flashes when charging, and the blue indicator light is always on when fully charged

1




EF01 EDC FLASHLIGHT MANUAL



WARNING:

1. Do not shine directly in the eyes, the powerful LED light will damage the eyes immediately.
2. If the battery is not used for a long time, please charge and discharge it every 3 months to keep the battery in good condition.
3. It is normal to use the lights for a long time to heat up.
4. When the indicator light shows low power, please charge the battery as soon as possible.
5. Please keep the battery away from water, moisture and drop etc.
6. To avoid damage to the surface of the flashlight, please do not expose the flashlight to sunlight, water, chemicals, corrosive gases or any other oxidizing environment frequently.
7. Before use, please tear off the transparent film on the battery surface before use.

INSTRUCTIONS FOR USE

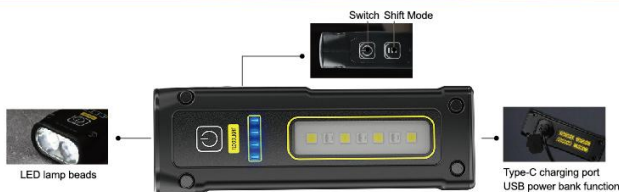

1. Press the central button switch to turn on the side light COB white light, continue to press to shift (white light-red light-red and blue flashing-off); press the side LED main switch to turn on/off the LED light source, turn on the LED light source, press Adjustment mode switch to adjust gear (double strong light-double low light-single strong light-single low light-) cycle.
2. The blue indicator light flashes when charging, and the blue indicator light is always on when fully charged

1

PRODUCT PARAMETERS

Model	EF01	Power	10w
Charging ways	Type-C	Weight	52G
Battery	Built-in battery	Size	96.5*32*17mm
Mode	Double Strong Light-Double Low Light-Single Strong Light-Single Low Light/ White Light-Red Light-Red and blue flash		

APPLICATION SCENARIO



Camping



Mountaineering



Capture



GO fishing



Rock climbing



Cycling



Motion



Construction



Explore



Repair

Warranty card

User name: _____

Phone number: _____

E-mail: _____

Address: _____

Other Contacts: _____

Release Date: _____

2

PRODUCT PARAMETERS

Model	EF01	Power	10w
Charging ways	Type-C	Weight	52G
Battery	Built-in battery	Size	96.5*32*17mm
Mode	Double Strong Light-Double Low Light-Single Strong Light-Single Low Light/ White Light-Red Light-Red and blue flash		

APPLICATION SCENARIO



Camping



Mountaineering



Capture



GO fishing



Rock climbing



Cycling



Motion



Construction



Explore



Repair

Warranty card

User name: _____

Phone number: _____

E-mail: _____

Address: _____

Other Contacts: _____

Release Date: _____

2