

USER MANUAL



HIGH BRIGHTNESS FLASHLIGHT

L3

APPLICATION SCENARIO



Camping



Mountaineering



Capture



GO fishing



Rock climbing



Cycling



Motion



Construction



Explore



Repair

Warranty card

User name: _____

Phone number: _____

E-mail: _____

Address: _____

Other Contacts: _____

Release Date: _____

WARNING:

1. Do not shine directly in the eyes, the powerful LED light will damage the eyes immediately.
2. If the battery is not used for a long time, please charge and discharge it every 3 months to keep the battery in good condition.
3. It is normal to use the lights for a long time to heat up.
4. When the indicator light shows low power, please charge the battery as soon as possible.
5. Please keep the battery away from water, moisture and drop etc.
6. To avoid damage to the surface of the flashlight, please do not expose the flashlight to sunlight, water, chemicals, corrosive gases or any other oxidizing environment frequently.
7. Before use, please tear off the transparent film on the battery surface before use.

INSTRUCTIONS FOR USE



PRODUCT PARAMETERS

Model	L3	Power	36w
Charging ways	400m	Weight	362G
Battery	26650	Size	63*36*239mm
Mode	Low Light-Medium Light-Strong Light-Strobe-SOS-Off		

1. Press the tail switch to turn on the strong light mode, and then press the tail switch button to adjust the mode: low light - medium light - strong light - strobe - SOS, and the 5 modes cycle sequentially, Press the switch again to turn off the light source.

2. Push and pull the lamp head to achieve telescopic focus adjustment.

SMART CHARGING

Smart Charging

No. 1 Indicator light

- Blue light on when power is on

No. 2.3 Indicator light

- Fully charged blue light
- Red light on when charging
- Corresponds to two charging slots
- Blue light shows when not charging



As our series of products will be continuously upgraded, this manual can still be applied to the subsequent series of products