

# USER MANUAL



**SENSOR HEADLIGHT**

**HL06**

## APPLICATION SCENARIO



Camping



Mountaineering



Capture



GO fishing



Rock climbing



Cycling



Motion



Construction



Explore



Repair

# Warranty card

User name: \_\_\_\_\_

Phone number: \_\_\_\_\_

E-mail: \_\_\_\_\_

Address: \_\_\_\_\_


Other Contacts: \_\_\_\_\_

Release Date: \_\_\_\_\_

## WARNING:

1. Do not shine directly in the eyes, the powerful LED light will damage the eyes immediately.
2. If the battery is not used for a long time, please charge and discharge it every 3 months to keep the battery in good condition.
3. It is normal to use the lights for a long time to heat up.
4. When the indicator light shows low power, please charge the battery as soon as possible.
5. Please keep the battery away from water, moisture and drop etc.
6. To avoid damage to the surface of the flashlight, please do not expose the flashlight to sunlight, water, chemicals, corrosive gases or any other oxidizing environment frequently.
7. Before use, please tear off the transparent film on the battery surface before use.

## INSTRUCTIONS FOR USE

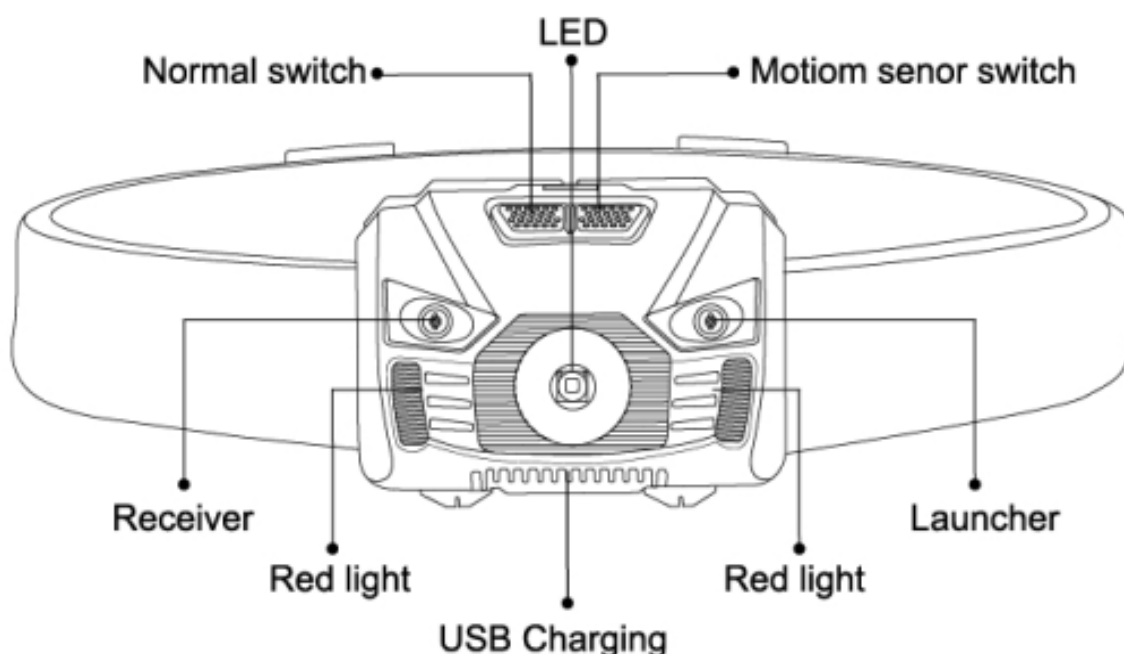

As our series of products will be continuously upgraded, this manual can still be applied to the subsequent series of products

## PRODUCT PARAMETERS

Model	HL06	Power	5w
Charging ways	Micro-USB	Weight	56G
Battery	Built-in battery	Size	60*45*36mm
Mode	Strong Light-Medium Light-Low Light-Strobe-SOS-Off		

1.HL06 headlamp have 6 modes. Click the right button, turn on the white light and strong light, continue to click the right button to shift, and press"strong light -- low light -- strobe -- off" successively.In any white light mode, long press the right button for 1.5 seconds to keep the red lights on both sides, continue to click the right button to adjust the gear, and press"red light keeps on -- red light strobing -- power off" successively. In any red light gear mode, long press 1.5 seconds to switch to white light and strong light.

2.Hand-wave sensor function: Press the left button, and the blue light will turn on the induction mode. Continue to press the left button to turn off the induction mode. Any gear into the induction mode manual sweep is strong light. Manual sweep sensing distance of 10CM.

3.The illumination angle of the light source can be adjusted between 0 and60 to meet various illumination requirements.

4.The headlamp is equipped with a USB charging port, and the headlamp can be charged with chargers, power banks, computers and other devices.The red light is always on when charging, and the green light is always on when full