



T36/T51/T57 CAMPING LIGHTS



WARNING:

1. Do not shine directly in the eyes, the powerful LED light will damage the eyes immediately.
2. If the battery is not used for a long time, please charge and discharge it every 3 months to keep the battery in good condition.
3. It is normal to use the lights for a long time to heat up.
4. When the indicator light shows low power, please charge the battery as soon as possible.
5. Please keep the battery away from water, moisture and drop etc.
6. To avoid damage to the surface of the flashlight, please do not expose the flashlight to sunlight, water, chemicals, corrosive gases or any other oxidizing environment frequently.
7. Before use, please tear off the transparent film on the battery surface before use.

APPLICATION SCENARIO



Camping



Emergency
lighting



Courtyard
lighting



Reading
at night



Night market
stalls



Barbecue
at night



Repair



Night
construction

INSTRUCTIONS FOR USE



INSTRUCTIONS

1. Turn the top switch knob clockwise to turn on the yellow light (continue to rotate stepless dimming; from low to high brightness)-white light (continue to rotate stepless dimming; from low to high brightness)-combined light (rotate to the bottom).
2. 1 blue indicator light flashes when charging; 4 blue indicator lights are always on when fully charged.

PRODUCT PARAMATERS

Model	T36
Charging ways	Type-C
Battery	Built-in 18650
Power	4.5W
Weight	380G
Size	117*170mm
Waterproof	IP44
Mode	Yellow Light-White Light-Combined Light

As our series of products will be continuously upgraded, this manual can still be applied to the subsequent series of products.

INSTRUCTIONS FOR USE



● Charging Indicator



● Hook



● Button



INSTRUCTIONS

1. Turn the side button clockwise to turn on the light source and steplessly adjust the light. It can be adjusted freely from low brightness to high brightness, and turn it counterclockwise to turn off the light source.
2. The red indicator light is on when charging, and the green indicator light is on when it is fully charged.

PRODUCT PARAMATERS

Model	T51
Charging ways	Type-C
Battery	18650
Power	5W
Weight	213G
Size	183*96.6*115.7mm
Waterproof	IP43
Mode	Lighting Mode Stepless Dimming

As our series of products will be continuously upgraded, this manual can still be applied to the subsequent series of products.

INSTRUCTIONS FOR USE



● Charging Indicator



● Hook



● Button



INSTRUCTIONS

1. Long press stepless dimming. Click to button the light source: tungsten warm light-SMD warm light-SMD white light-Combined light. Double-click to button the red light: red light - red light flashing - red light SOS.
2. The 15%-100% green indicator light is on, the 5%-15% red indicator light is on, and the red indicator light is flashing below 5%.

PRODUCT PARAMATERS

Model	T57
Charging ways	Type-C
Battery	Built-in 18650
Power	3.2W
Weight	150G
Size	104*93mm
Waterproof	IPX4
Mode	Warm Light-White Light-Combined Light/ Red Light-Red Flash-Red Light SOS

As our series of products will be continuously upgraded, this manual can still be applied to the subsequent series of products.